

TURNING ON THE CLOCK

To turn the clock on

- Press [GAME TIME] to turn on scoreboard or to change from time of day
- Press [TIME] [ENTER]

STARTING A NEW GAME

- To clear the current game press [GAME TIME] [GAME TIME]
- To start a new game press [GAME TIME] repeatedly, the display will rotate through start times 5, 8, 10, 12, 15, 20, 45, 60 minutes
- To set a non-standard game time press [GAME TIME] use numeric keypad to enter the correct time, then [ENTER] for example 14min [GAME TIME] [1] [4] [0] [0] [ENTER]

CONTROL PANEL



SETTING UP DIFFERENT PERIOD DURATIONS

- Press [TIME], use numeric keypad to enter the correct time, then press [ENTER] for example for 12 minute period [TIME] [1] [2] [0] [0] [ENTER]

RUNNING THE CLOCK

- [STOP/GO] controls the running time

WARMUP OR INTERMISSION

- Press [INT], use numeric keypad to enter the correct time, then press [ENTER] for example for 2 minute warm up [INT] [2] [0] [0] [ENTER]

The horn sounds at the end of intermission

TIME OUTS (Stop time first)

- To set a 30 second time out press [INTERM-Warm UP] [0] [3] [0] [ENTER]
- If penalties are on the clock the penalty time will hold

CHANGING THE CLOCK TIME

- Press [TIME], use numeric keypad to enter the correct time, then press [ENTER] for example for 6:38 [TIME] [0] [6] [3] [8] [ENTER]

PERIODS

- The period will automatically increment at the end of the period
- To increment the period press [9 / PERIOD]

SCORES

- To increment the score by 1 goal press [HOME SCORE] or [VISITOR SCORE]
- To correct a score, press [HOME SCORE] or [VISITOR SCORE], use numeric keypad to enter the correct score [0-99] digits, then [ENTER]

SHOTS

- To increment the shots by 1 goal press [HOME SHOTS] or [VISITOR SHOTS]
- To correct a score, press [HOME SHOTS] or [VISITOR SHOTS], use numeric keypad to enter the correct shots [0-99] digits, then [ENTER]

PENALTIES (Stop time first)

- To enter a 2 min penalty, press the [HOME PENALTY] or [VISITOR PENALTY], [ENTER] use numeric keypad to enter the player number [1-99], then [ENTER]
- To enter a 4, 5 or 7 min penalty, press [HOME PENALTY] or [VISITOR PENALTY], press [TIME] repeatedly until the correct time appears, [ENTER], use numeric keypad to enter the player number [1] to [9] [9], then [ENTER]
- To correct or cancel a penalty, press [HOME PENALTY] or [VISITOR PENALTY], press penalty number [1] to [5] (1st to 5th consecutive penalty) [TIME] use numeric keypad to enter the correct time or 0 to cancel, then press [ENTER], use numeric keypad to enter the player number [1] to [9] [9], then [ENTER]

Shortest MINOR PENALTY is AUTO CANCELLED when opposing score is updated. To keep penalty, press [ENTER] while penalty time is flashing

Examples:

- 2 minute for player 12 – [HOME PENALTY] or [VISITOR PENALTY] [ENTER] [1] [2] [ENTER]
- Correct first penalty to 1:38 minute for player 9 – [HOME PENALTY] or [VISITOR PENALTY] [1] [TIME] [1] [3] [8] [ENTER] [0] [9] [ENTER]
- 5 minute for player 18 – [HOME PENALTY] or [VISITOR PENALTY] [TIME] [TIME] [ENTER] [1] [8] [ENTER]

Hold Penalties in run time, [PENALTY STOP/GO] to Stop and start penalty timing without changing game time

3rd, 4th and 5th penalties are displayed as dots on the scoreboard and they are held as delayed. They are entered the same way as all other penalties.

SOUND THE HORN

- To sound the horn immediately press [HORN]

SETTING TEAM NAMES

Not possible on this clock

PROGRAMMABLE INTERVAL HORN

An interval horn can be set to sound time durations of 1 to 9 MINUTES or 10 to 1:59 SECONDS

- To set an interval horn, press [TIME] [HORN] [1] to [9] min or [10] to [119] sec [ENTER]

Cancel interval horn [TIME] [HORN] [0] [ENTER]

MISCELLANEOUS

- To fix a mistake press [ENTER] [0] [ENTER] to return settings to last [STOP]
- Show time of goal or penalty, press [TIME OF], shows the time INTO the period (period time minus time remaining) when the event occurred held whilst the button is pressed
- To see time of the day press [TIME] [ENTER] even with the timer running, to return to the game press [TIME] [ENTER]