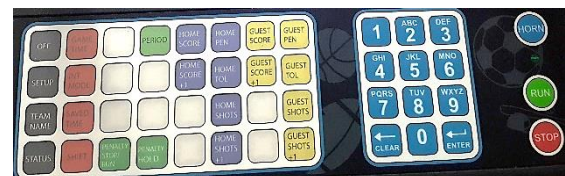


**TURNING ON THE CLOCK**

Not applicable

**CONTROL PANEL****STARTING A NEW GAME**

- To Set the game time press the [ **GAME TIME** ] button, then follow the cursor on the screen:
    - Enter number of minutes using the keypad e.g. 10mins press [ **1** ] [ **0** ], press [ **↵ENTER** ]
    - Enter number of seconds using the keypad e.g. 00secs press [ **0** ] [ **0** ], press [ **↵ENTER** ]
    - Enter number of mili-secs using the keypad e.g. 00mili-secs press [ **0** ] [ **0** ], press [ **↵ENTER** ]
  - To set the period press [ **PERIOD** ] button, then follow the cursor on the screen
    - Enter the period number using the keypad e.g. Period 1 press [ **0** ] [ **1** ] then press [ **↵ENTER** ]
- TIP: To update any information, the screen must be flashing. If no flashing spaces on the screen, your action timed out and you must restart the process.

**SETTING UP DIFFERENT PERIOD DURATIONS**

- To change the game time press the [ **GAME TIME** ] button, then follow the cursor on the screen:
  - Enter number of minutes using the keypad e.g. 10mins press [ **1** ] [ **0** ], press [ **↵ENTER** ]
  - Enter number of seconds using the keypad e.g. 00secs press [ **0** ] [ **0** ], press [ **↵ENTER** ]
  - Enter number of mili-secs using the keypad e.g. 00mili-secs press [ **0** ] [ **0** ], press [ **↵ENTER** ]

TIP: To update any information, the screen must be flashing. If no flashing spaces on the screen, your action timed out and you must restart the process.

**RUNNING THE CLOCK**

- To start the time, press the circular green [ **RUN** ] button
- To stop the time, press the circular [ **STOP** ] button

**WARMUP OR INTERMISSION**

- To enter Intermission mode press the [ **INT MODE** ] button, then follow the cursor on the screen:
  - Enter number of minutes using the keypad e.g. 2mins press [ **2** ], press [ **↵ENTER** ]
  - Enter number of seconds using the keypad e.g. 00secs press [ **0** ] [ **0** ], press [ **↵ENTER** ]
- To exit intermission mode press the [ **INT MODE** ] button

TIP: To update any information, the screen must be flashing. If no flashing spaces on the screen, your action timed out and you must restart the process.

**TIME OUTS (Stop time first)**

Time outs are not possible on this clock but you can use the intermission mode

- To enter Intermission mode press the [ **INT MODE** ] button, then follow the cursor on the screen:
  - Enter number of minutes using the keypad e.g. 0mins press [ **0** ], press [ **↵ENTER** ]
  - Enter number of seconds using the keypad e.g. 30secs press [ **3** ] [ **0** ], press [ **↵ENTER** ]

**CHANGING THE CLOCK TIME**

- Press the [ **GAME TIME** ] button, then follow the cursor on the screen:
  - Enter number of minutes using the keypad e.g. 10mins press [ **1** ] [ **0** ], press [ **↵ENTER** ]
  - Enter number of seconds using the keypad e.g. 00secs press [ **0** ] [ **0** ], press [ **↵ENTER** ]
  - Enter number of mili-secs using the keypad e.g. 00mili-secs press [ **0** ] [ **0** ], press [ **↵ENTER** ]

TIP: To update any information, the screen must be flashing. If no flashing spaces on the screen, your action timed out and you must restart the process.

**PERIODS**

- To set the period press [ **PERIOD** ] button, then follow the cursor on the screen:
  - Enter the period number using the keypad e.g. Period 1 press [ **0** ] [ **1** ] then press [ **↵ENTER** ]

**SCORES**

- To add 1 goal, press the [ **HOME SCORE + 1** ] button or the [ **GUEST SCORE + 1** ] button
- To correct the score, press the [ **HOME SCORE** ] button or the [ **GUEST SCORE** ] button, then follow the cursor on the screen:
  - Enter the correct score using the keypad e.g. 2 press [ **2** ], then press [ **↵ENTER** ]

**SHOTS**

- To add 1 shot, press the [ **HOME SHOTS + 1** ] button or the [ **GUEST SHOTS + 1** ] button
- To correct the score, press the [ **HOME SHOTS** ] button or the [ **GUEST SHOTS** ] button, then follow the cursor on the screen:
  - Enter the correct score using the keypad e.g. 2 press [ **2** ], then press [ **↵ENTER** ]

**PENALTIES (Stop time first)**

- To enter a penalty, press the [ **HOME PEN** ] button or the [ **GUEST PEN** ] button, the first available slot under Home or Away PENALTY will start to flash, then follow the cursor on the screen:
  - Enter player number using the keypad e.g. 2 press [ **2** ], then press [ **↵ENTER** ]
  - Enter penalty minutes using the keypad e.g. 2mins press [ **2** ], then press [ **↵ENTER** ]
  - Enter penalty seconds using the keypad e.g. 00secs press [ **0** ] [ **0** ], then press [ **↵ENTER** ]
- To correct a penalty, press the [ **HOME PEN** ] button or the [ **GUEST PEN** ] button, until the penalty you want to correct is flashing, then follow the cursor on the screen:
  - Enter player number using the keypad e.g. 2 press [ **0** ] [ **2** ], then press [ **↵ENTER** ]
  - Enter penalty minutes using the keypad e.g. 2mins press [ **2** ], then press [ **↵ENTER** ]
  - Enter penalty seconds using the keypad e.g. 00secs press [ **0** ] [ **0** ], then press [ **↵ENTER** ]
- To clear a penalty, press the [ **HOME PEN** ] button or the [ **GUEST PEN** ] button, until the penalty you want to clear is flashing, then follow the cursor on the screen:
  - Press [ **↵CLEAR** ]

**SOUND THE HORN**

- To sound the horn immediately press [ **HORN** ]

**SETTING TEAM NAMES**

Team Names are not displayed on the clock, these are for your screen display  
\*\*\*Please do not change the default\*\*\*

**PROGRAMMABLE INTERVAL HORN**

An interval horn can be set to sound time durations of 1 Second to 9:59 MINUTES

- To set an interval horn, press [ **SHIFT** ] button, then follow the cursor on the screen:
  - Enter number of minutes using the keypad e.g. 1mins press [ **1** ], press [ **↵ENTER** ]
  - Enter number of seconds using the keypad e.g. 30secs press [ **3** ] [ **0** ], press [ **↵ENTER** ]
  - Ensure that "Shift" is displayed at top right of the screen
- To clear an interval horn, press [ **SHIFT** ] button, then follow the cursor on the screen:
  - Press [ **↵CLEAR** ] to clear the minutes, press [ **↵ENTER** ]
  - Press [ **↵CLEAR** ] to clear the seconds, press [ **↵ENTER** ]

Ensure that "Shift" does not appear at the top right of the screen

**MISCELLANEOUS**